TERMIGNONI S.p.a.
Via della Rampina 1 Tel. 0039.0131.71666
15077 Predosa – Italy Fax 0039.0131.71696
www.termignoni.it info@termignoni.it

NOTE DI ASSEMBLAGGIO *ASSEMBLY NOTES*

K086	KAWASAKI Z900RS 2019	SLIP ON

01

02

SMONTAGGIO DEL SILENZIATORE

•Svitare vite di fissaggio paracalore e conservarla per il montaggio del kit Termignoni (fig. 01)

•Rimuovere paracalore (fig. 02)

•Svitare vite di fissaggio silenziatore e conservarla (fig 03)

•Allentare fascetta innesto (fig. 04)

•Rimuovere silenziatore (fig. 05)

•Togliere gommino e conservarlo per il kit Termignoni (fig.06)

03

04

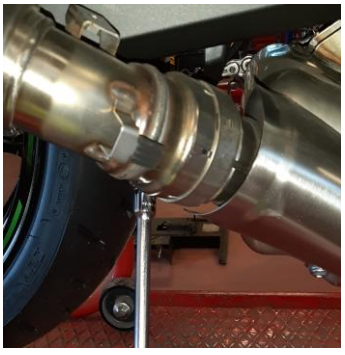

DISASSEMBLING THE SILENCER

•Unscrew the heat shield screw and keep it for mounting of the Termignoni kit (fig. 01)

•Remove the heat shield (fig. 02)

•Unscrew the silencer fastening screw and keep it (fig 03)

•Loosen the tube junction clamp (fig. 04)

•Remove the silencer (fig. 05)

•Remove the rubber seal and keep it for the Termignoni kit (fig.06)

05

06

TERMIGNONI S.p.a.
Via della Rampina 1 Tel. 0039.0131.71666
15077 Predosa – Italy Fax 0039.0131.71696
www.termignoni.it info@termignoni.it

NOTE DI ASSEMBLAGGIO *ASSEMBLY NOTE*

K086	KAWASAKI Z900RS 2019	SLIP ON

01

02

03

04

05

06

07

08

09

10

MONTAGGIO DEL KIT TERMIGNONI

•Fissare la staffa al silenziatore utilizzando le viti in dotazione (fig. 01)

•Inserire tronchettoe apposita fascetta sul collettore di serie (fig 02)

•Inserire il silenziatore Termignoni sul tronchetto e fissare con vite, dado e rondella originali (fig. 03-04)

•Serrare vite di fissaggio silenziatore e fascetta innesto (fig. 05-06)

•Inserire gommino precedentemente smontato e molletta fillettata sul corpo finale (fig. 07-08)

•Posizionare paracalore originale e fissare con vite di serie (fig.09-10)

MOUNTING THE TERMIGNONI KIT

•Affix the silencer bracket using the screws provided (fig. 01)

•Connect the stub pipe and dedicated clamp to the standard collector (fig 02)

•Connect the Termignoni silencer to the stub pipe and fasten using the original screw, nut and washer (fig. 03-04)

•Tighten the silencer fastening screw and tube junction clamp (fig. 05-06)

•Attach the previously removed rubber seal and threaded clip to the final section (fig. 07-08)

•Position the original heat shield and fasten with standard screws (fig.09-10)

TERMIGNONI S.p.a.
Via della Rampina 1 Tel. 0039.0131.71666
15077 Predosa – Italy Fax 0039.0131.71696
www.termignoni.it info@termignoni.it

DOTAZIONE PACKING LIST

K086	KAWASAKI Z900RS 2019	SLIP ON

N°1 STAFFA SUPPORTO – SUPPORT BRACKET TK097

N°1 RACCORDO SILENZIATORE - SILENCER ADAPTER PIPE K08609430I

N°1 FASCETTA METALLICA – METAL CLAMP FASC.GBS W4 / 51-55

N°1 molletta filettata M6 - M6 threaded clip RPI0136